

SUNMI Cash Drawer Trigger

Directly open your cash drawer from your tablet or POS system.

USB and Bluetooth Enabled

Use it to open a cash drawer directly using your tablet, laptop or computer. A 5V USB port is enough to power it to open a 24V cash drawer.

Compatible With Multiple Systems

It can work with devices running Windows, Android or iOS and all types of cash drawers on the market.

Short Circuit Protection

It only opens a cash drawer without short circuit as verified by a detection running automatically after the trigger is connected to a power supply.



Two connection patterns available:

1. Bluetooth: suitable for taking payments with a tablet.



Powered with a 5V/2A power adapter.

2. USB-A: suitable for taking payments with a desktop POS terminal.



Powered with a USB-A port by the desktop POS terminal.

Cash Drawer Trigger Tech Specs

Input

Type-A USB, 5V/2A

Bluetooth

BLE 5.0

Indicator Light

Power indicator, Bluetooth indicator

Cash Drawer Output

RJ12, 24V/1A, 100ms

OS

Windows
(USB CDC and BT BLE modes supported)
Android
(USB CDC and BT BLE modes supported)
iOS
(BT BLE mode supported)
macOS
(USB CDC mode supported)

Compatibility

Windows: open by shortcut icon, OPOS driver, or serial port command.
Android: open by SDK driver.
iOS: open by SDK driver.
macOS: open by serial port command.